# ▲ Ampac

# MultiAmp DH250mA Door Holder Supply

Installation guide

# Description

The MultiAmp-DH 250mA Door Holder Supply (DHS) provides up to 250mA of current at 24 VDC to operate door holders.

Automatic Door Release System (ADRS):. Conventional detectors are installed and connected directly to the Door Holder Supply.

**Release / Reset:** A manual release and/or Reset is initiated by depressing the "Release/Reset' button for at least 1 second.

**Remote Trigger (Release / Reset):** Doors can be released or the circuit "Reset" by the application of a local +VDC or and external +/- 12 to 24VDC supply input.**Installation:** 

#### Observe anti-static precautions at all times

#### Surface Mount

Locate the back box over a flat surface, securing with at least two (2) screws, tightened evenly to prevent distortion.

## Flush Mount

Locate the back box inside the wall cavity with the front edge level with the wall surface.

## **Conduit Entries**

20mm conduit entries, side, rear, and top or bottom depending on back box used.

As shown below, observing polarity connect the;

1. Detector circuit to TB3 1 (-ve) & 2 (+ve) with EOL.

#### Item Number: 4510-1100 & 4510-1101

- 2. Door holder to TB3 3 (-ve) & 4 (+ve)
- 3. Remote trigger to TB2 in either a local +VDC or external 12 to 24VDC configuration as shown
- 4. With no voltage applied mains to TB1
- 5. Place the DHS over the back box, tighten securing screws and insert the two screw caps.

#### Testing

- Press and hold the "Release" button for at least 1 second, the "Released" indicator should then be illuminated and the door released.
- Create an alarm on the detector circuit, The "Released" indicator will be illuminate and the door released.
- 3. Remove the alarm condition and press "Reset" to revert normal operation.

		POWER •	
		RELEASED	
	AMPAC	RELEASE	
	MultiAmp-DH	RESET	
			1.00

Figure 1: Front Panel Layout



Figure 2: Rear View and Cabling Diagram