

**Description:**

The Manual Plant Trip Reset FACP clip in module is fitted with a normally open push button switch which when pushed for five (5) seconds initiates the reset function.

**Installation:**

**Observe anti-static precautions at all times**

1. Remove a blanking plate in the front panel of the FACP and clip in the reset module
2. Run and plug the cable into CN6 on the Main board, positioned as shown below

**Testing / Operation**

1. Isolate any systems that may be affected by testing
2. Select and manually trip an item of plant associated with the system.
3. Press and hold the push button switch for five (5) seconds
4. Check and or test the selected equipment has been reset
5. Return the system to normal
6. Update any written operating instructions associated with the installation

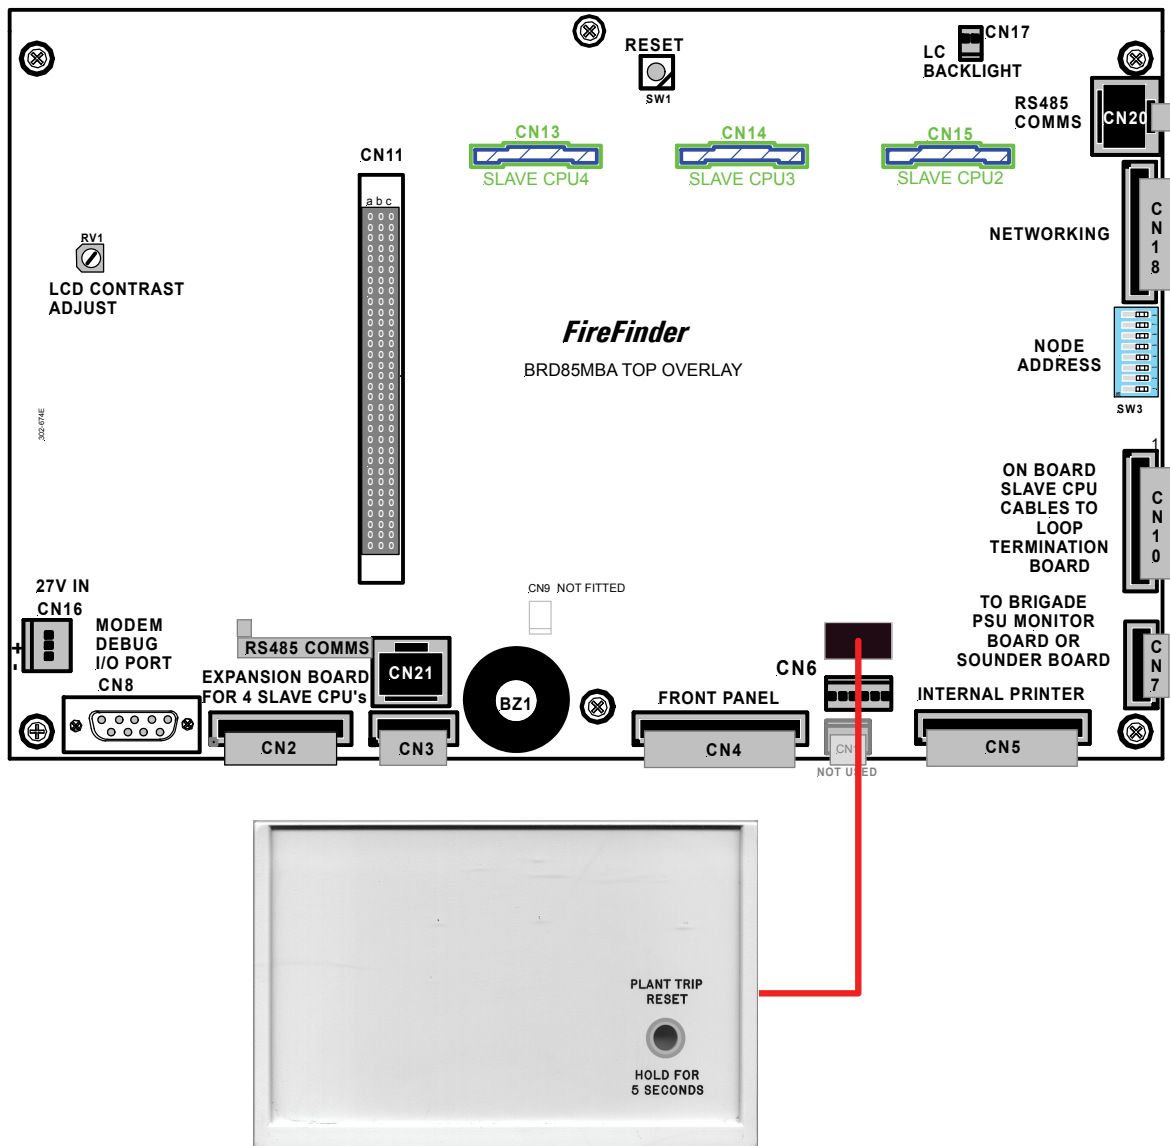


Figure 1: Plant Trip Reset wiring diagram