




SPK-08 Sound Projector - Installation Instructions

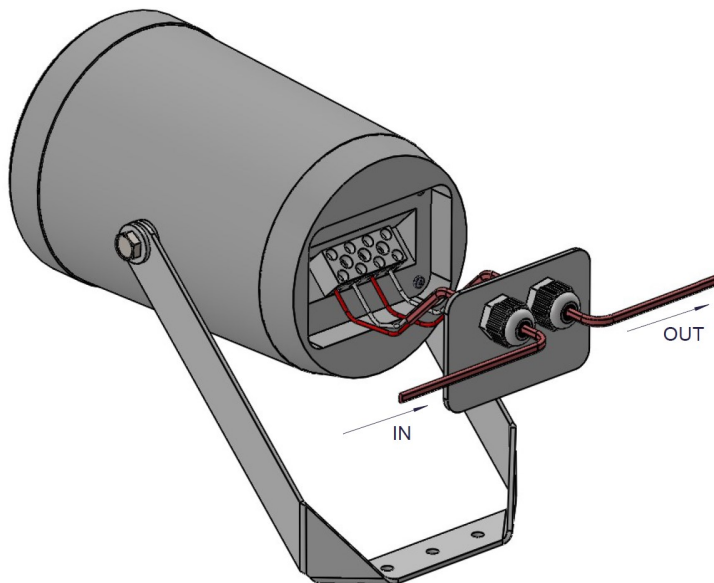


- 1) Remove the "U" shape bracket from the speaker and position where required on the wall or pole. Mark the fixing points and fix the bracket using suitable fixings (not supplied)

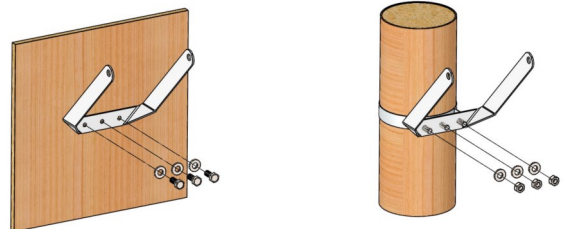

- 2) Remove the rear access cover using a flat screwdriver.

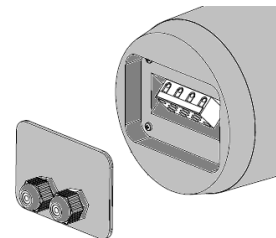


Power Tapping

 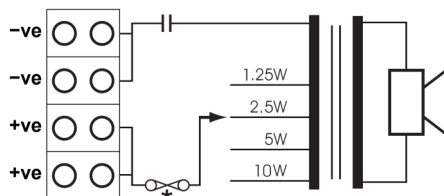


* Optional Overload Fuse

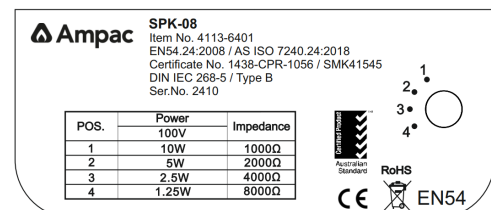

- 3) Select the desired power tapping using the rotary switch.



- 4) Feed the incoming cables through the compression cable gland fixings provided, tighten appropriately and connect the wires to the terminal block of the speaker.



- 5) Refit the rear access cover using a screwdriver and refit the speaker to the "U" bracket. Position the sound projector to the desired angle then tighten the fixings to secure in place.

	EN54-24:2008 1438-CPR-1056 DoP - AT-6113-6000
Loudspeaker for voice alarm systems for fire detection and fire alarm systems for buildings	
Sound Projector, 10W SPK-08, Type B	
The Ampac Group of companies 7 Ledger Road, Balcatta, Western Australia 6021	
CE-Symbol according 93/68EWG CPR compliance according 305/2011/EU	
	AS ISO 7240.24:2018 SMK41545