




Fire detection and evacuation solutions that save lives.

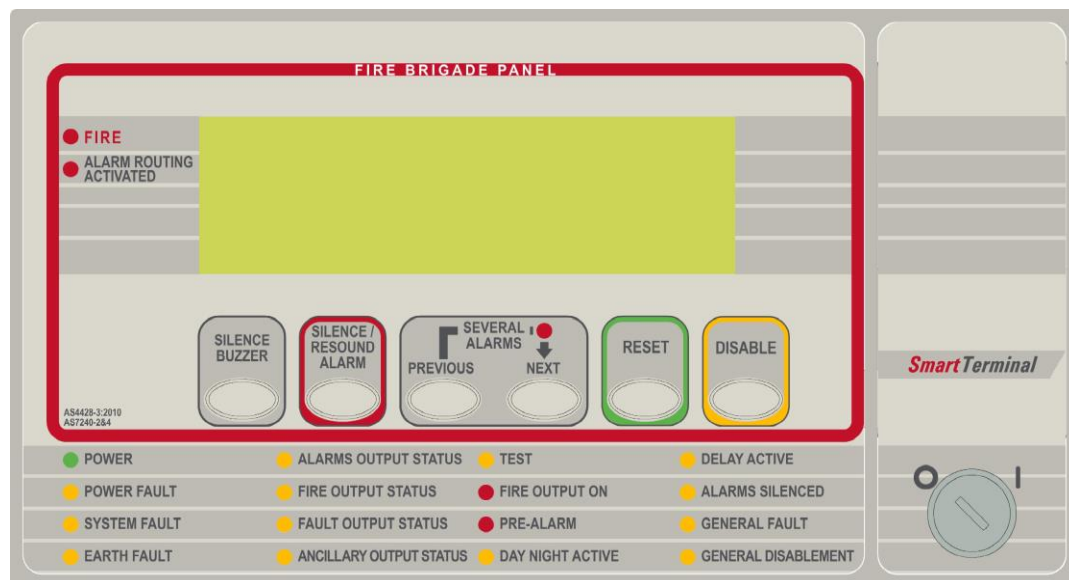

## SmartTerminal AS7240

# Installation and Operation Guide

MAN2990-1

## Contents

<b>1</b>	<b><i>Introduction.....</i></b>	<b>3</b>
<b>2</b>	<b><i>Mechanical .....</i></b>	<b>4</b>
2.1	Mounting the Enclosure.....	4
2.1.1	Enclosure Details.....	4
2.1.2	Fixing the Chassis to the Wall.....	4
2.1.3	Board Removal / Replacement .....	5
2.1.4	Removing the Knockouts.....	5
<b>3</b>	<b><i>LoopSense Installation &amp; Cabling .....</i></b>	<b>7</b>
3.1	SmartTerminal Termination Board Interconnection .....	7
3.2	FACP Comms .....	7
<b>4</b>	<b><i>Firefinder Plus Installation &amp; Cabling.....</i></b>	<b>8</b>
4.1	SmartTerminal Termination Board Interconnection .....	8
4.2	FACP Comms .....	8
<b>5</b>	<b><i>Setting the Address .....</i></b>	<b>9</b>
<b>6</b>	<b><i>Setting the SmartTerminal in LoopMaster .....</i></b>	<b>10</b>
<b>7</b>	<b><i>Setting the SmartTerminal in ConfigManager Plus .....</i></b>	<b>12</b>
<b>8</b>	<b><i>Operation.....</i></b>	<b>13</b>
<b>9</b>	<b><i>Controls and Indicators.....</i></b>	<b>14</b>
9.1	LCD Screen Format .....	18
<b>10</b>	<b><i>Specifications .....</i></b>	<b>20</b>
<b>11</b>	<b><i>Trouble Shooting Chart.....</i></b>	<b>21</b>

## 1 Introduction

**SmartTerminal** complies with AS7240 and has been designed for use with the **LoopSense** and **Firefinder Plus** series of FACP's.

- 4 line by 40 character LCD with backlight and navigation keys ▲ ▼ keys allow the SmartTerminal to be used for FACP operation and interrogation. Note the backlight is only energised when alarms are present, a key has been pressed or controls enable key switch is enabled
- Buzzer and system Reset.
- System expansion capabilities / options:
- A wide range of secure user functions. This includes the ability to disable / re-enable a large number of system functions.
- Flush or surface mountable enclosure.
- Controls have tactile and audible feedback of operation.
- All terminals cater for 2.5mm cables.

**SmartTerminal** connects to the Fire Alarm Control Panel (FACP) via the RS485 multidrop communication port. Generally it is designed to be used anywhere where the status of the FACP is required to be monitored by local personnel and limited control is required.

- Front panel controls that allow the resetting of alarms and activation/silencing of alarm devices. Enabling operational access to the controls is via a key-switch;
- Reports events from devices that are accessible to the host FACP. For example if the host FACP is configured with global access then the connected **SmartTerminal** reports events from all devices. If the host FACP is configured as local then the connected **SmartTerminal** reports events from devices that are directly connected to the host FACP.

**SmartTerminal** essentially consists of two PCBs;

1. **SmartTerminal** Termination Board. A Termination Board is mounted in each SmartTerminal to protect and interface the RS485 communications and 27VDC supply to the LCD Board
2. BRD82ICC – Control, LCD Communications and LCD Driver Board

**SmartTerminal** can be supplied in three styles;

1. **BX05: Slim line SmartTerminal**
2. **BX1: Standard SmartTerminal**
3. **BX1: SmartTerminal with self-contained PSU**



**Note:** A maximum of 30 **SmartTerminal's** may be connected to the communications bus over a distance of approximately 1.2Kms

## 2 Mechanical

**SmartTerminal** is supplied in an ABS cabinet and consists of;

The Main Card, with all controls and indicators mounted directly onto it

- 1 X Termination Board
- 2 X ABS door keys
- 2 X 003 Enable / Disable keys
- 2 X Jumper links

The front door of the ABS version is locked by way of two clips on the right hand side of the cabinet. A special locating key which has two raised pins that are inserted into the side of the cabinet unlocks the door.

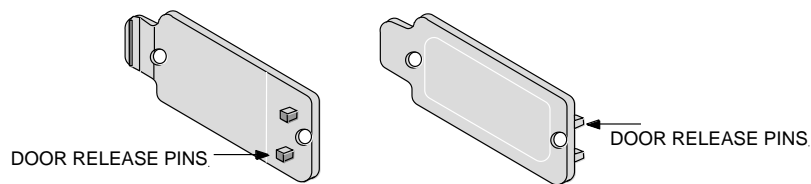


Figure 1: ABS Door Key

### 2.1 Mounting the Enclosure

The panel **MUST** be mounted in an area that is **NOT** subject to conditions likely to affect its performance, e.g. damp, salt-air, water ingress, extremes of temperature, abuse etc. is at an easily accessible height and such that the indicators are at eye level.

Typical locations for the panel are the first and most obvious point of contact for emergency services or a security office that is likely to be permanently staffed.

#### 2.1.1 Enclosure Details

The LCDA can be surface or semi-flush mounted, is supplied with a detachable front door, mountable back box and a minimum of two separate PCBs.

#### 2.1.2 Fixing the Chassis to the Wall

Taking into account the weight of the panel securely mount it by using the three keyhole mounting holes in the backpan, two in the top and one in the bottom. Use suitably sized screws and plugs for the type of mounting surface.

Caution: Any dust or swarf created during the fixing process must be kept out of the cabinet and great care should be taken not to damage any wiring or components.


### 2.1.3 Board Removal / Replacement


If a PCB has to be removed the following precautions should be observed;

- Removing the door will provide better access to the boards and will ensure the hinges are not accidentally stressed.



- Personal anti- static procedures must be followed.
- When disconnecting the RJ45 style connecting cable from the PCB, make sure that the cable remains connected to at least one board to prevent it being misplaced.

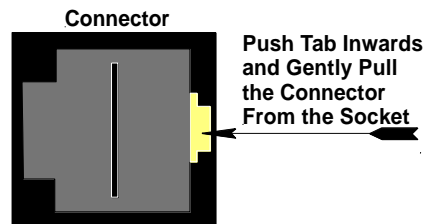



 **Note:** Care should be taken when detaching this connector as it is necessary to depress the small locking tab to unlock the connector from its base. To reconnect the cable the connector must first be correctly aligned then pushed into the socket so it locks into position.

- Carefully remove the retaining screws at each corner of the board taking care not to damage any of the components.
- Place each board into anti- static storage once removed.

### 2.1.4 Removing the Knockouts

The knock-outs should be removed with a sharp tap in the rim of the knock-out using a flat broad-bladed screwdriver. *Note: Use of excessive force could damage the enclosure around the knock-out.*

 **Note:** BX05 shown the BX1 is set out in a similar manner.

 **Note:** Any unused knock-outs must be securely blanked off.

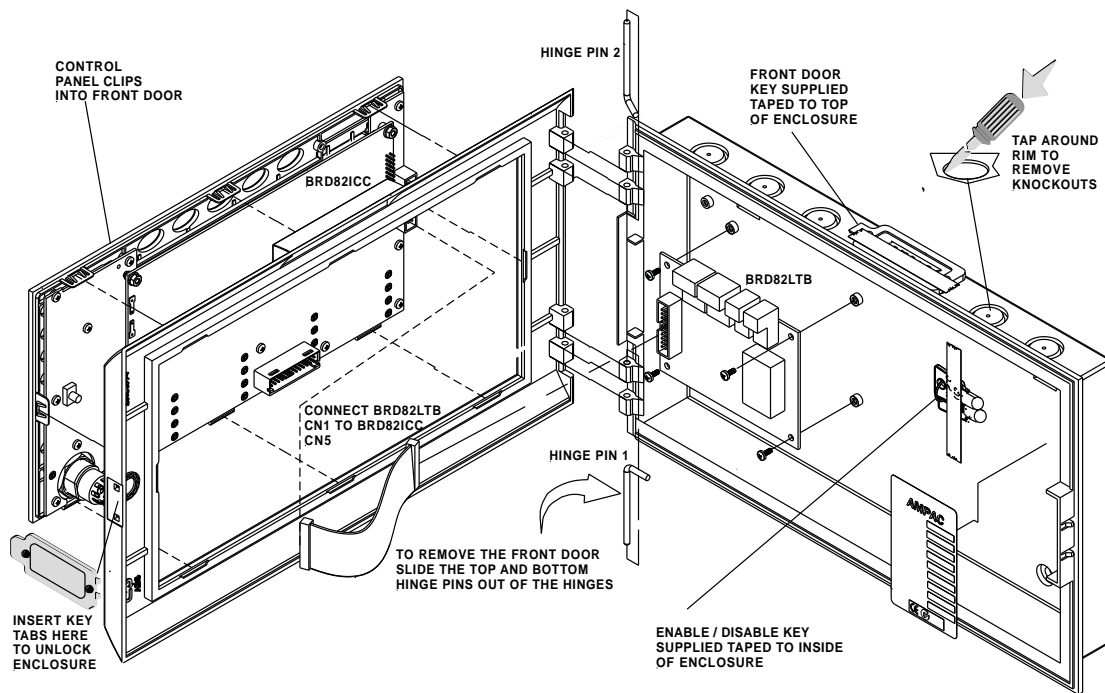


Figure 2: Exploded View

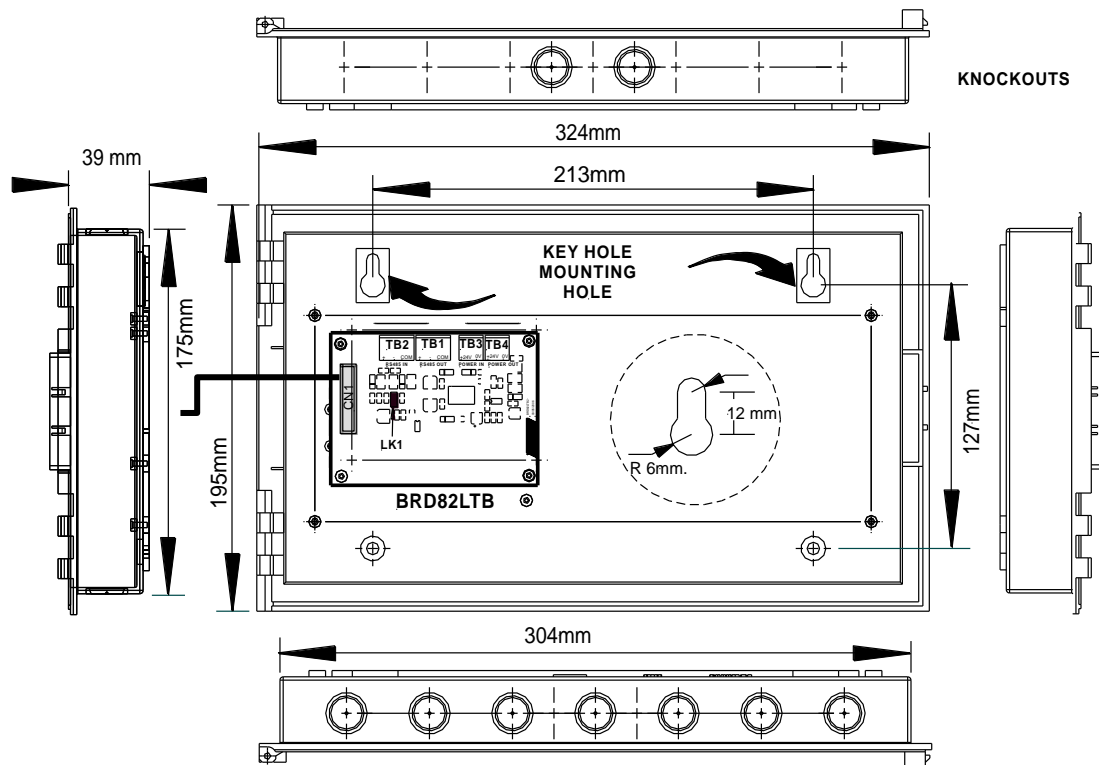


Figure 3: Typical Layout (Externally Powered) and Location of Keyholes

### 3 LoopSense Installation & Cabling

The **SmartTerminal** is connected to the FACP's as shown below.

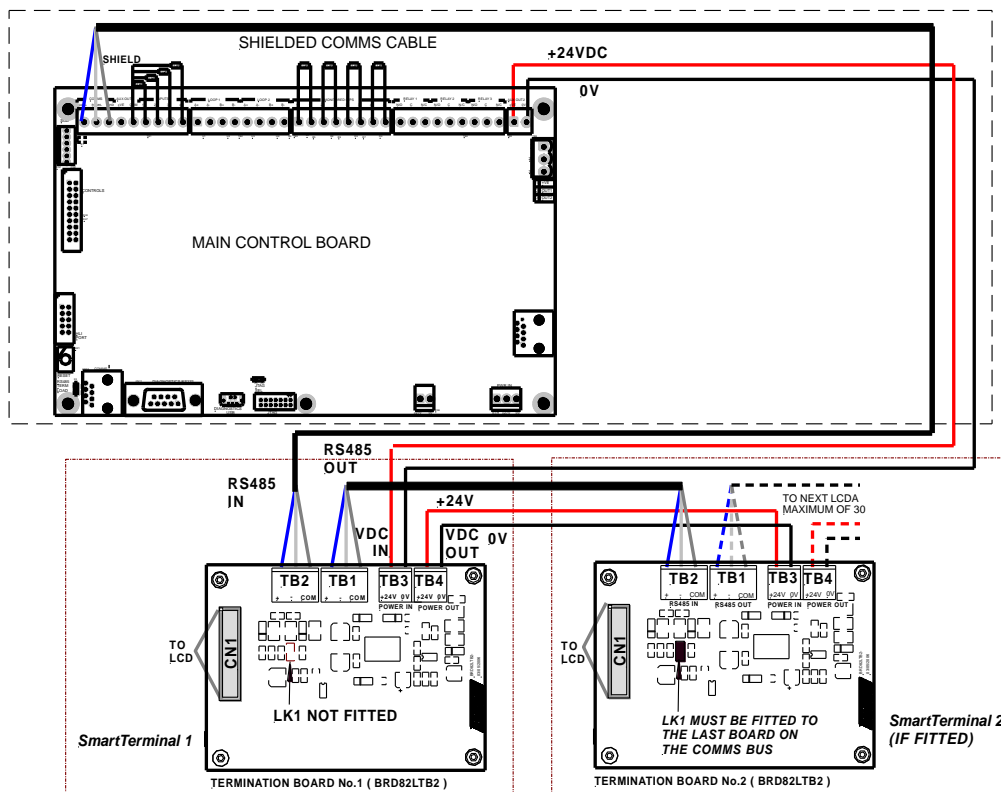


Figure 4: Connecting **SmartTerminal** to the **LoopSense** FACP

#### 3.1 SmartTerminal Termination Board Interconnection

Terminal Block TB1 (RS485 OUT) TB2 (RS485 IN)	Purpose
1 (Pin Number)	RS485 +ve
2	RS485 -ve
3	SCREEN
Terminal Block TB4 (27VDC OUT) TB3 (27VDC IN)	
1 (Pin Number)	0V
2	+24VDC

#### 3.2 FACP Comms

LoopSense Main Board Terminal Block TB1 (RS 485 OUT)	Purpose
1 (Pin Number)	RS485 +ve
2	RS485 -ve
3	SCREEN
Terminal Block TB4 (27VDC OUT)Number	Purpose
1	0V
2	+24VDC

## 4 Firefinder Plus Installation & Cabling

The **SmartTerminal** is connected to the FACP's as shown below.

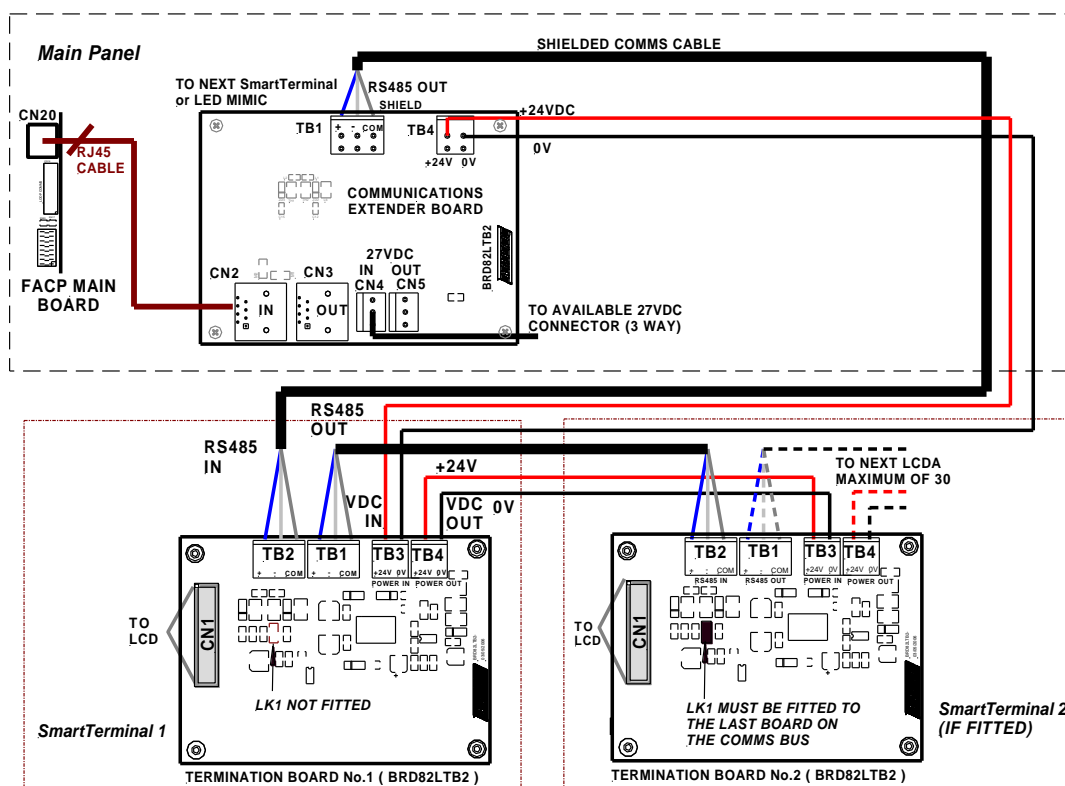


Figure 5: Connecting **SmartTerminal** to the **Firefinder Plus FACP**


#### 4.1 SmartTerminal Termination Board Interconnection

Terminal Block TB1 (RS485 OUT) TB2 (RS485 IN)	Purpose
1 (Pin Number)	RS485 +ve
2	RS485 -ve
3	SCREEN
Terminal Block TB4 (27VDC OUT) TB3 (27VDC IN)	
1 (Pin Number)	0V
2	+24VDC

## 4.2 FACP Comms

Communication Extender Board Terminal Block TB1 (RS 485 OUT)	Purpose
1 (Pin Number)	RS485 +ve
2	RS485 -ve
3	SCREEN
Terminal Block TB4 (27VDC OUT)Number	Purpose
1	0V
2	+24VDC



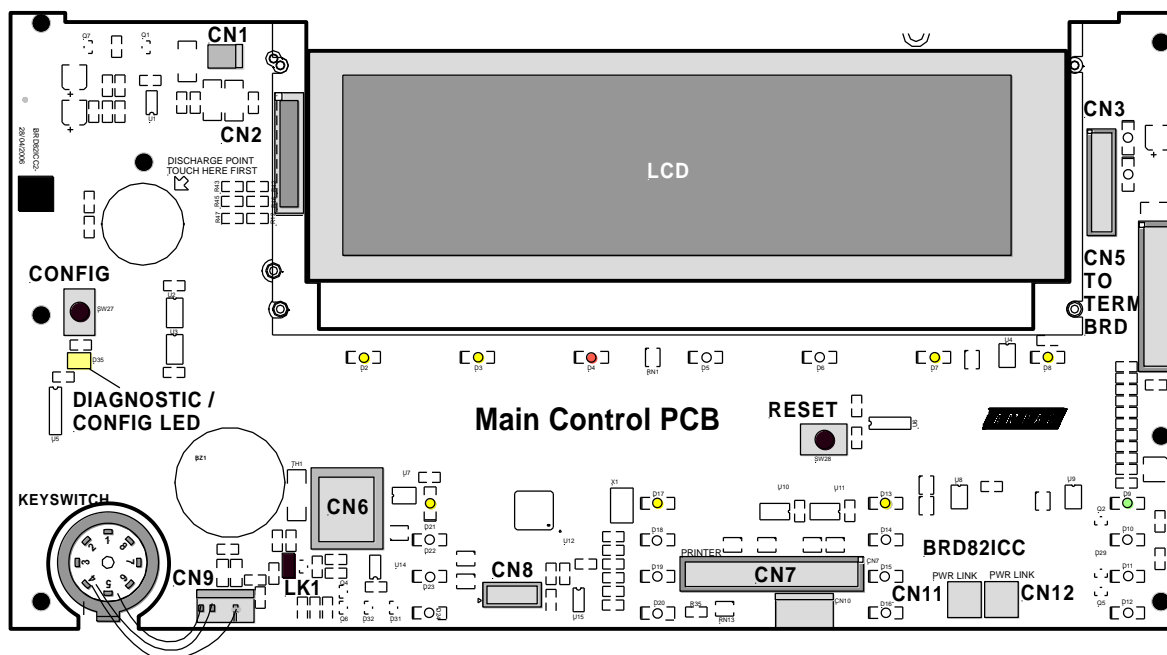

## 6 Setting the SmartTerminal in LoopMaster

This section assumes the engineer has experience in the use of LoopMaster and hence has an understanding of its operation. To commence the programming go to the “Tree View” within LoopMaster as shown below.

### The Tree View

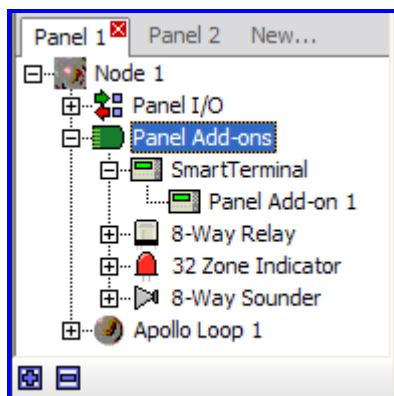



Figure 7

The above shows the expanded view of the SmartTerminal add on type. In the case above the panel in question has 1 SmartTerminal assigned to it, entitled ‘Panel Add-on 1’.

Selecting one of these add ons will update the Details Pane with the respective module’s information, while double-clicking on the add-on will open its editing dialog box.


### The **SmartTerminal** Menu

Right-clicking on the SmartTerminal add on parent item from the Tree View opens the menu,



It contains an option to add a panel Add-on to the panel.

Right-clicking on an existing **SmartTerminal** add on from the Tree View opens the menu,

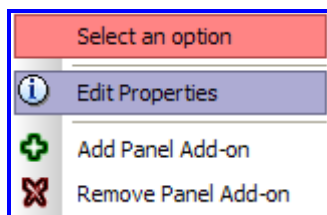

It contains an option to add another or remove the current Add-on or via the ‘Edit Properties’ option to open the Add on editing dialog box.



**Note:** that it is possible to have a maximum of 30 SmartTerminal add ons per panel, however, this value will reduce as other add-on types are added (the entire panel can have a maximum of 30 add-ons, of any type, at any one time).

### The Details View

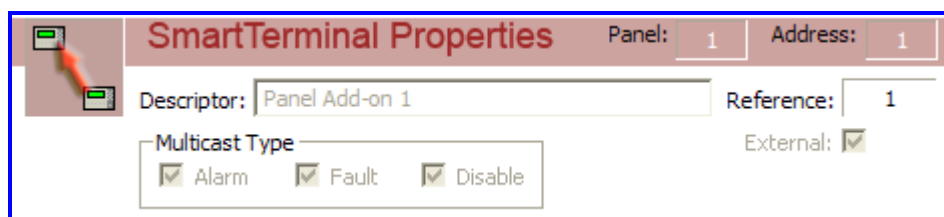


Figure 8

The above is displayed as part of the SmartTerminal Details Pane representation of the information available to the configuration of the data. It is displayed at the top portion of the Details Pane and is a non-editable, accurate representation of editable fields for a SmartTerminal.

### The List View




Address	Ref	Descriptor	Multicast	External
 1	1	Panel Add-on 1	Alarm/Fault/Disable	Y
 2	5	Panel Add-on 5	Alarm/Fault/Disable	Y

Figure 9

The SmartTerminal add on List View appears immediately below the SmartTerminal add on Details View and consists of a summary of all available SmartTerminal add ons assigned to the current panel. In the above, there are 2 add on **SmartTerminal's** assigned to this panel, entitled 'Panel Add-on 1' and 'Panel Add-on 5' respectively.

Double-clicking on an entry in the list opens the editing dialog box for that particular SmartTerminal.

### Editing

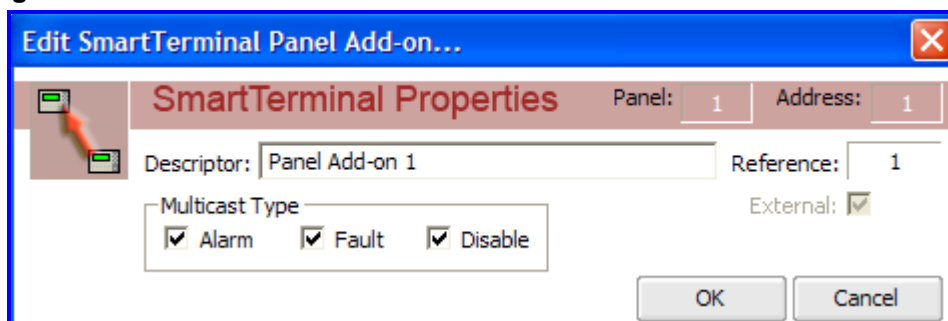

The dialog box is titled "Edit SmartTerminal Panel Add-on...". It contains a "SmartTerminal Properties" section with the following fields:

- Panel: 1
- Address: 1
- Descriptor: Panel Add-on 1
- Reference: 1
- External: ☒
- Multicast Type:
  - ☒ Alarm
  - ☒ Fault
  - ☒ Disable

Buttons: OK, Cancel

Figure 10

The SmartTerminal add on editing dialog box consists of two types of fields:

#### 1. Non-editable (informational) fields:

- Panel – The panel number this module belongs to,
- Address – The hardware address of this particular module; addresses can be in the range of 1 to 30,
- Reference – The reference number of this module


#### 2. Editable fields:

- Multicast Type – The user can select one or more Multicast Types for this module to process,
- External – If this checkbox is checked then this add on is to be used on the external bus,
- Descriptor – Allows the user to enter a 40 character descriptor describing this add on

## 7 Setting the SmartTerminal in ConfigManager Plus

This section assumes the engineer has experience in the use of Configmanager and hence has an understanding of its operation.

Open the Addon Editing window and add a Smart Terminal.

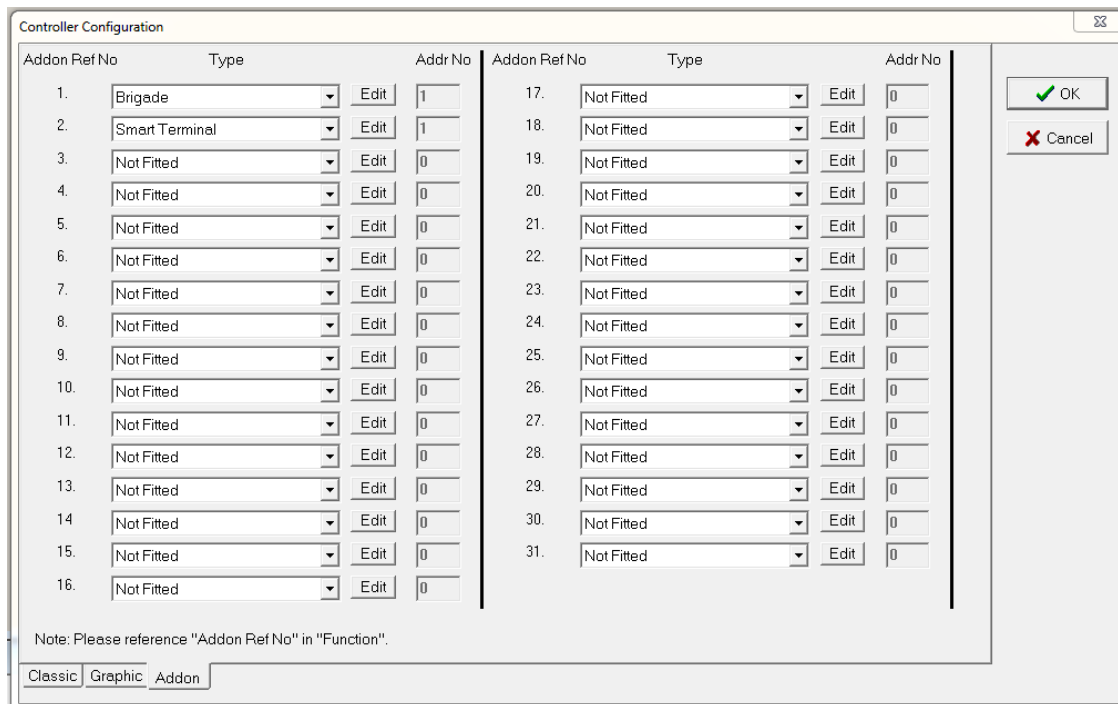


Addon Ref No	Type	Addr No	Addon Ref No	Type	Addr No
1.	Brigade	1	17.	Not Fitted	0
2.	Smart Terminal	1	18.	Not Fitted	0
3.	Not Fitted	0	19.	Not Fitted	0
4.	Not Fitted	0	20.	Not Fitted	0
5.	Not Fitted	0	21.	Not Fitted	0
6.	Not Fitted	0	22.	Not Fitted	0
7.	Not Fitted	0	23.	Not Fitted	0
8.	Not Fitted	0	24.	Not Fitted	0
9.	Not Fitted	0	25.	Not Fitted	0
10.	Not Fitted	0	26.	Not Fitted	0
11.	Not Fitted	0	27.	Not Fitted	0
12.	Not Fitted	0	28.	Not Fitted	0
13.	Not Fitted	0	29.	Not Fitted	0
14.	Not Fitted	0	30.	Not Fitted	0
15.	Not Fitted	0	31.	Not Fitted	0
16.	Not Fitted	0			

Note: Please reference "Addon Ref No" in "Function".

Classic Graphic Addon

Figure 11 Smart terminal added to reference 2

Select the smart terminals associated "Edit" button to open the individual editing window.

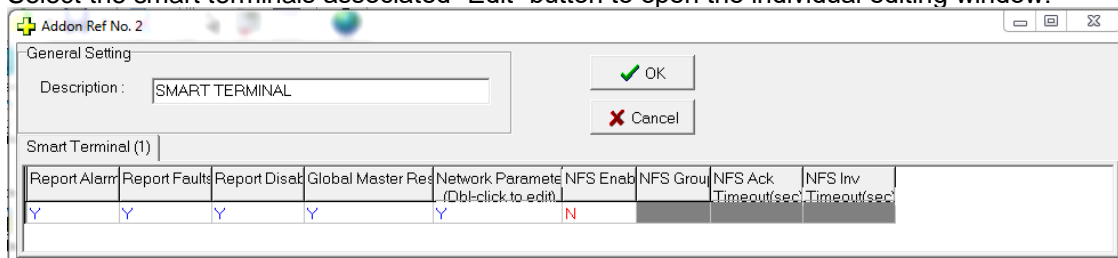

General Setting

Description: SMART TERMINAL


Smart Terminal (1)

Report Alarm	Report Faults	Report Disab	Global Master Res	Network Paramete	NFS Enab	NFS Grou	NFS Ack	NFS Inv
Y	Y	Y	Y	(Dbl-click to edit)	N		Timeout(sec)	Timeout(sec)

Figure 12 Smart terminal editing window

In this editing window you can choose what information the Smart Terminal will display and respond to. The default settings are shown in image 12 above.

The NFS (Nurse Fire Station or also known as the Hospital Special Smart terminal) can be set by changing the NFS enable field to yes.

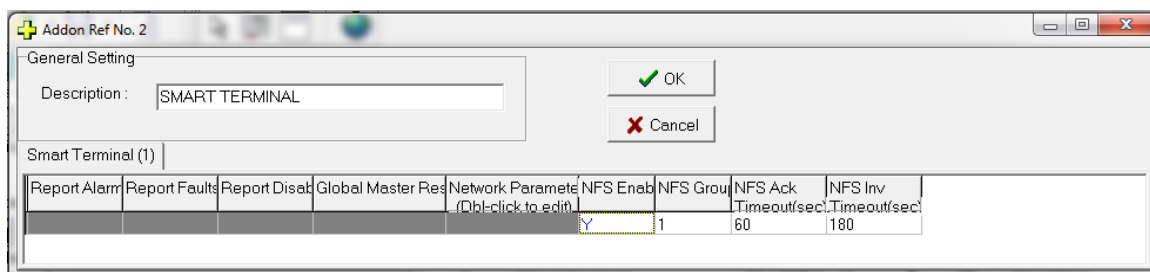

General Setting

Description: SMART TERMINAL

Smart Terminal (1)

Report Alarm	Report Faults	Report Disab	Global Master Res	Network Paramete	NFS Enab	NFS Grou	NFS Ack	NFS Inv
				(Dbl-click to edit)	Y	1	60	180

Figure 13 NFS editing window

## 8 Operation

The operation of **SmartTerminal** can be considered to be in one of three states, these are;

1. Power up - when the SmartTerminal is initialising
2. Normal - when the SmartTerminal address has been set and is communicating with the FACP, reporting normal / abnormal conditions and controlling the FACP via the front panel controls
3. Fault where the SmartTerminal is in fault and/or is unable to communicate with the FACP.

### Power Up

The LCD displays a message telling the operator **SmartTerminal** is being powered up and that the hardware is being initialised. Once the hardware has been successfully initialised set the address and **SmartTerminal** should automatically transition to the normal state. Should a failure occur on power up press the "RESET" button located on the LCD PCB (see *Figure 5*) and check the address is correct.

### Normal

The Normal state is entered from the "Power-up" or a return from the "Fault" state and is displayed on the LCD if the **SmartTerminal** is communicating with the FACP and operating correctly. In this state the front panel Power indicator is illuminated.

### Fault

**SmartTerminal** enters the Fault state upon;

- A hardware failure
- LCD module failure or
- A loss of communications with the FACP (indicated by the "DIAGNOSTIC" LED – not flashing and the "no communications" message being displayed)

In a Fault condition the front panel NORMAL indicator is extinguished and the details of the fault are displayed on the LCD. The FACP will also indicate a fault in a similar manner.

## 9 Controls and Indicators

All controls, except for the Enable / Disable keyswitch, are of a momentary push button style.

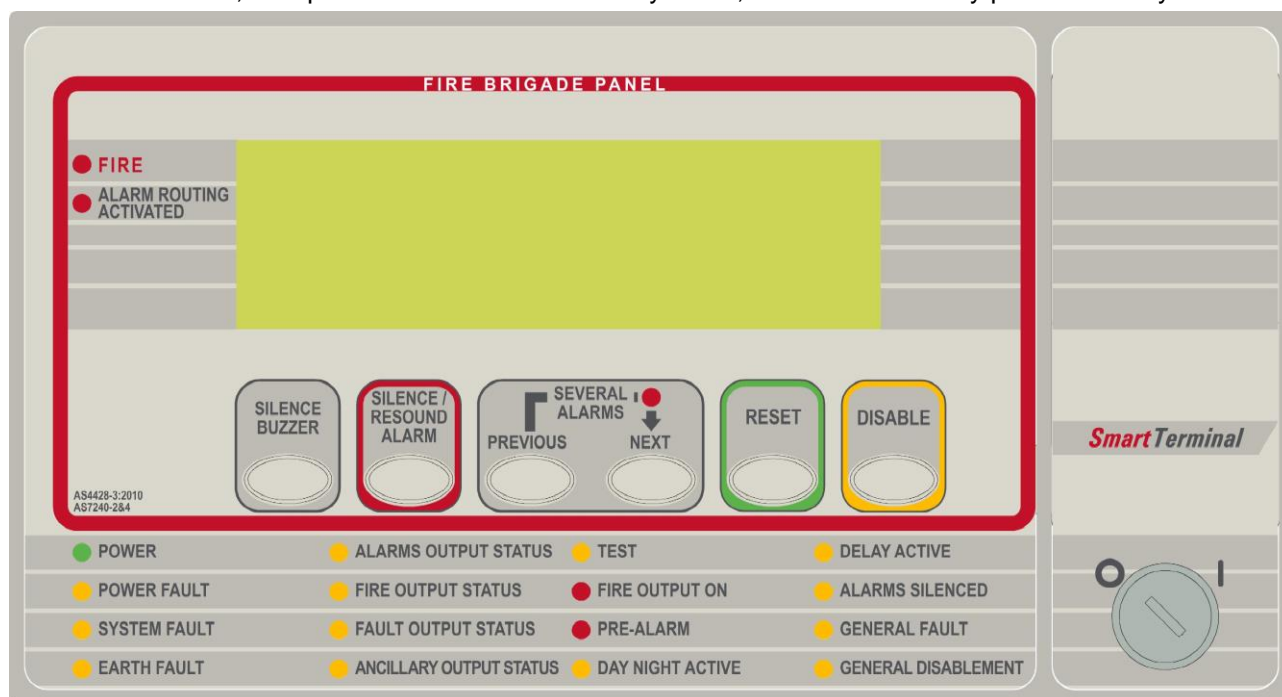


Figure 14: **SmartTerminal** Front Panel Layout

 **Note:** Keys, when pressed, will present an audible feedback “beep” to the user.

### KEYSWITCH

#### Access levels

There are two levels of access.

**Access level 1** only the previous and next front panel controls are operative. All other controls operate in access level two.

**Access level 2** is entered when the key-switch is in the ENABLED position.

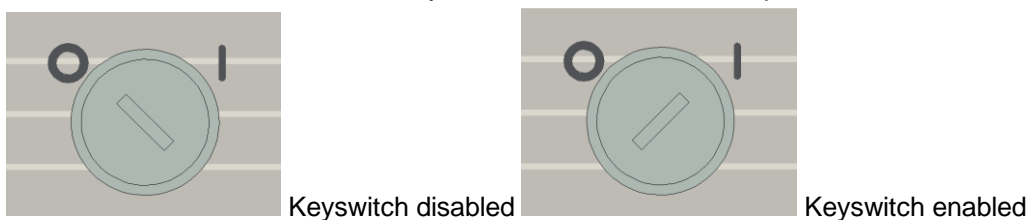


Figure 15: Keyswitch in the Disabled / Enabled Positions

*The Following are all accessible at access level 2 and above*

#### SILENCE BUZZER



**Silence Buzzer** – Silences the panel buzzer. Buzzer is activated under the following conditions:

#### Alarm Buzzer -

- Fire condition

#### Fault Buzzer -

- Fault with loop devices
- Fault with the loops
- Fault with the fire alarm routing equipment or fault warning routing equipment
- Fault with alarm devices or circuit
- Fault with connected modules, cards and boards
- Fault with secondary power supply
- Fault with main power supply


#### ALARMS SILENCE / RESOUND

*Available at access level 2 and above*



**Alarms Silence / Resound** – Used to silence the alarm devices. Toggle function to resound any silenced alarm devices, if the ALARMS SILENCED indicator is lit. Only alarm devices configured with the silence-able attribute set shall respond to silence/resound.

#### PREVIOUS / NEXT (SEVERAL ALARMS)

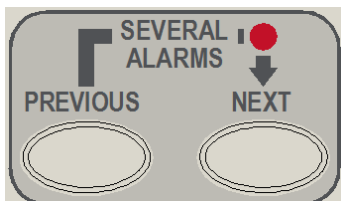

**Previous / Next (Several Alarms)** – Momentary push buttons, used to scroll thru the LCD display to view the previous / next available entry. The Several Alarms LED will illuminate when there is more than one zone is in fire or fire/disabled

#### RESET



**Reset** – Returns the FACP to its normal default state, by clearing all fire alarm conditions, updating the relevant indicators and outputs and clearing the system fault indicator. If fault conditions are cleared they must be re-established within 20 seconds.

## DISABLE



**Disable** – Context sensitive toggle function to disable/enable point displayed on active status screen



**FIRE** Illuminated when one or more devices are reporting the FIRE condition or the evacuate control has been activated.



**ALARM ROUTING ACTIVATED** Illuminated when the designated FARE input is active. The indication shall remain until the fire alarm condition is reset



**POWER** Illuminated to show the presence of mains power and flashes when the mains have failed



**POWER FAULT** Illuminated when there is a fault with the power supply. Fault can be no mains, high charger voltage, low battery voltage or missing/damaged battery



**SYSTEM FAULT** Illuminated when the FACP is unable to provide mandatory functions. Indicator is latched, until cleared by the RESET control



**EARTH FAULT** Illuminated when there is an earth fault detected on the panel



**ALARMS OUTPUT STATUS** Illuminated steady if any of the alarm devices (sounders and/or strobes) have been disabled and flashes if any of the alarm devices (sounders and/or strobes) are in fault. Disable has priority over fault



**FIRE OUTPUT STATUS** Illuminated steady if the fire output has been disabled and flashes if the fire output is in fault (open or short circuit condition). Disable has priority over fault



**FAULT OUTPUT STATUS** Illuminated steady if the fault output has been disabled and flashes if the fault output is in fault (open or short circuit condition). Disable has priority over fault.



**ANCILLARY OUTPUT STATUS** Illuminated steady if the ancillary output has been disabled and flashes if the ancillary output is in fault (open or short circuit condition). Disable has priority over fault



**TEST** Illuminated when the panel is in the “Walk Test” mode.



**FIRE OUTPUT ON** Illuminated when the designated Fire Output is active. The indication remains illuminated until the alarm condition is reset



**PRE-ALARM** Illuminated when one or more devices are in the pre-alarm condition and not disabled



**DAY NIGHT ACTIVE** Illuminated when day / night facility has been enabled



#### ● DELAY ACTIVE

Indicator is illuminated steady when one or more zones are configured with Investigation delays and Delay Mode is active. The indicator shall flash if any Investigation delay timer is running. If the override control or evacuate control is activated while the investigation delay timer is running, then the indicator shall go steady and the investigation zone shall enter the fire condition.

The indicator shall only be OFF if:

- The Delay Mode is OFF
- No investigation delays are configured
- The panel has switched to day or night mode where no delays have been configured

#### ● ALARMS SILENCED

The indicator is illuminated when the sounders configured to be silence-able have been silenced in response to any activation sources, indicating the resound function is active.

#### ● GENERAL FAULT

Illuminated when there are one or more faults on the system.

Faults can be from the following sources

- Fault with loop devices
- Fault with the loops
- Fault with the fire alarm routing equipment or fault warning routing equipment
- Fault with alarm devices or circuit
- Fault with connected modules, cards and boards
- Fault with secondary power supply
- Fault with main power supply

#### ● GENERAL DISABLEMENT

Indicator is illuminated when one or more zone detectors, loop devices or panel outputs are disabled.

**Buzzer** - To meet sound level requirements of AS7240-2:2004:85dB(A).

The Buzzer will be activated for the following conditions

- Fire – Continuous On
- Fault – 1sec On / 4.5sec Off
- Key press – Single beep
- Extended Key Press – Double Beep

## 9.1 LCD Screen Format

There are 3 events that can be reported and displayed by **SmartTerminal**. The types of event are;

- Fire
- Faults and
- Disables.

The types of events are only associated with sensors and detectors hence faults associated with modules, loops O/C – S/C, power supplies and so forth are not reported on the LCD.

The **SmartTerminal** has front panel indicators for each type of event. When **SmartTerminal** is configured not to report a type of event and that event type is present (and the corresponding front panel indicator is illuminated on the **SmartTerminal**), then a standard information screen is displayed on the LCD stating the system is not normal and the operator should see the FACP.

**Alarm:** If configured the screen format for reporting loop / sensor / zone fire condition is:

```
FIRE - ORIGIN:Zzzz RECENT:Zzzz TOTAL:XXX
-----
Zzzz                FIRE
<zone descriptor>
<date> <time>                CONTROL*
ZONE FIRE XXX OF XXX        DEVICE▶
-----
```

**Fault:** If configured the screen format for reporting loop / sensor / zone fault condition is:

```
Zzzz                FAULT
<zone descriptor>
<date> <time>                CONTROL*
FAULT XXX OF XXX        DEVICE▶
```

In the event of a loss of communications, for a period of greater than 15 seconds the **SmartTerminal** will default to the No Communications screen. The format for this screen is:

No Communication

**Device Isolate / Disables:** If configured the screen format for reporting loop / sensor / zone disable condition is:

```
Zzzz                Isolate
<zone descriptor>
<date> <time>                CONTROL*
ZONE PRE-ALARM XXX OF XXX    DEVICE▶
```

**Pre-alarm:** If configured the screen format for reporting loop / sensor / zone Pre-alarm condition is:

```
Zzzz          PRE-ALARM
<zone descriptor>
<date> <time>          CONTROL*
ZONE DISABLED XXX OF XXX    DEVICE▶
```

**Normal / Default:** The format for reporting that everything is normal is:

```
<DATE> <TIME>          ACCESS LEVEL: 1
<USER DESCRIPTOR LINE 1>
<USER DESCRIPTOR LINE 2>
<SYSTEM STATUS>      <DAY MODE-MAN I/O>
```

The screen is only displayed when there are no alarms, fault or disables on the panel.

The default screen is only displayed when there are no device alarms, device faults or device disables present on the system. The highest priority current system status will be displayed and can be one of the following listed in order of highest to lowest priority:

1. "SYSTEM ALARM"
2. "SYSTEM PRE-ALARM"
3. "SYSTEM FAULT"
4. "SYSTEM ISOLATE"
5. "SYSTEM NORMAL"

**Config:** The Config screen displays the following

```
VX.X (software version number
Address
```

A- A+ C- C+

A - A +: adjusts the address 1 to 30, 30 being the maximum number of **SmartTerminal's** that can be connected to the FACP, (default is 255 which is not a valid address).

The function keys perform the following;

A – Press "Previous"

A+ press "Next"

C - C+: decreases [-] and increases [+] the LCD contrast level.

The function keys perform the following;

C – Press "Silence Buzzer"

C+ press "Reset"

## 10 Specifications

<b>MECHANICAL</b>	
Dimensions ABS Cabinet BX05: (mm)	195mm (H) x 345mm (W) x 50mm (D)
Dimensions ABS Cabinet BX1: (mm)	300mm (H) x 360mm (W) x 100mm (D)
<b>ENVIROMENTAL</b>	
Temperature:	-5°C to + 55°C
Humidity:	25% to 75% non condensing
<b>INPUT POWER</b>	
Operating Voltage (nominal):	27VDC
Operating Voltage (minimum):	18VDC
Quiescent Current @ 26.5VDC:	12.4mA (back light, off buzzer off")
Maximum Current:	43.8mA (back light on, buzzer on)
Cabling Requirements:	2 core 1.5 to 2.5mm <sup>2</sup>
Optional 27VDC Power Supply:	1.8A plus 400mA Battery Charging
Batteries:	12Ahr
<b>27VDC OUTPUTS</b>	
Auxiliary 27VDC Distribution Protection:	24VDC 500mA Monitored
Cabling Requirements:	2 core 1.5 to 2.5mm <sup>2</sup>
<b>COMMUNICATIONS</b>	
Internal to FACP:	RS485
External to FACP:	RS485
Cabling Requirements:	Twisted pair plus power
Fault monitoring:	O/C, S/C
Maximum Number of SmartTerminal's per FACP:	30
Maximum Distance (from FACP):	1.2Kms.
<b>LCD</b>	4 line X 40 character - backlit

## 11 Trouble Shooting Chart

Problem	Solution
Normal Supply LED not illuminated	Check supply voltage it should be set to 27.2VDC. Nominal fault voltages are - Low = (<18VDC) High = (> 28VDC )
FACP Earth Fault LED illuminated	Check all input and output cabling and wiring assemblies for short to ground
FACP System Fault LED illuminated	Ensure correct panel configuration Check all connections for loose wiring
FACP Warning System Fault LED illuminated	Check correct E.O.L is fitted Check wiring is connected correctly
RS485 Communication Bus not working	Refer FACP LCD. This may identify where there is a break in the communication line Check the <b>SmartTerminal</b> Diagnostic Config LED is flashing. If not the FACP is not communicating with the SmartTerminal. Check the RS485 cabling. If flashing check the <b>SmartTerminal's</b> address.

**UNCONTROLLED DOCUMENT**

*NOTE: Due to AMPAC's commitment to continuous improvement specifications may change without notice.*